

INTERLOCKING TILES

Protect-All® Interlocking Tiles offer an instant flooring solution for temporary or permanent applications with most of the same great benefits of a traditional Protect-All floor. Quick and easy to install, these 18" x 18" interlocking tiles are suitable for indoor and outdoor use. Their interlocking tabs hold them together, eliminating the need for adhesives or special installation equipment.

Characteristics


- Excellent traction: wet or dry
- Resistant to common fats, acids and greases
- Resistant to stains, odor and fluids
- Shock absorbing and impact resistant
- Available in matte and gloss finishes

Testing Data

	TEST METHOD	UNITS	RESULT
Dynamic Coefficient of Friction	ANSI A326.3		0.56
Coefficient of Friction	ASTM D-695	Dry	0.88
Compressive Strength	ASTM D-751	psi	641
Bacteria and Mildew Resistance	ASTM G-21		Pass

Applications


Home gyms | Fitness centers | Garages
 Grooming areas | Weight rooms | Cashier stations

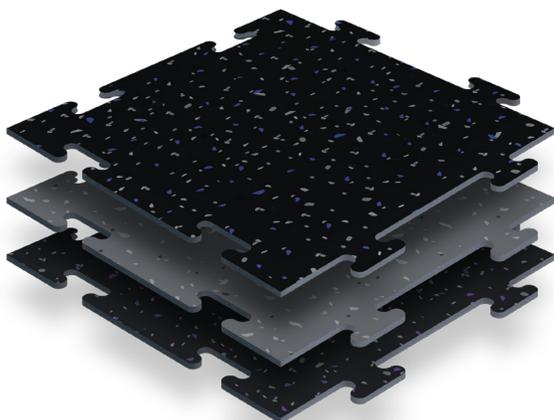

Colors


Option A

Protect-All's most popular colors which feature a special combination of fleck colors. Color customization not available.

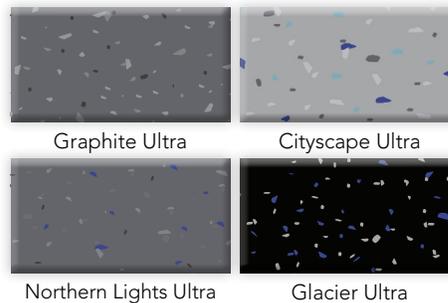

Option B

Choose a standard fleck mix to add to the eight Flooring Base colors. Fleck saturation is 25%. Fleck colors are equal parts within each mix.

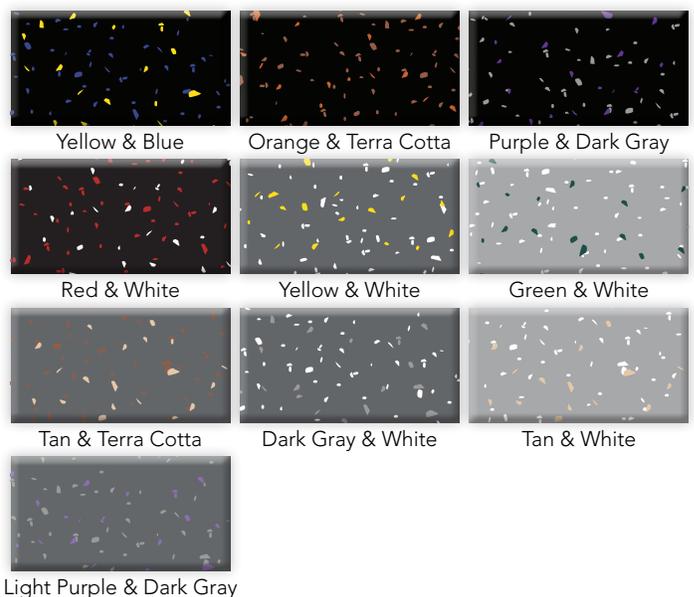

Installation Instructions

Tools

- Sharp utility knife
- Straight edge
- Pencil
- Tape measure
- Chalk line

Instructions

1. Measure the room and multiply the width by the length to find its total area, (e.g. 12' W X 10' L = 120 square feet). Divide the total by 2.25 to get the actual number of tiles needed, (e.g. $120 \div 2.25 = 53.33$, round up to 54). A cutting allowance between 7–10% should be added for rooms more than 100 square feet in size.

To find how many tiles fit in a row, take the width or length measurement and divide by 1.5. It is best to round up to the nearest whole number. (e.g. $12' W \div 1.5 = 8$ tiles for width OR $10' L \div 1.5 = 6.67$, round up to 7).

2. For the best appearance, establish how the tiles are to be set out before starting the project.


The arrowhead corner orientation must be maintained throughout the installation for proper fit and appearance.

3. Find the center point of the room:
 - Measure across the room and mark the center.
 - Measure the room in the other direction and mark the center.
 - Snap a chalk line across both center points; the intersection of the two lines (illustrated below as dotted lines) is the center of the room.

Begin at the center and work out to each wall. Lay tiles in place smooth side up until the walls are reached, maintaining the orientation of the arrowhead tile corners. Cut-offs from one side of room installation (up to 9" width, for maximum border width) can be used on the opposite side to fit against perimeter of installation field (see illustration at left, border shaded in gray).

Leave at least a ¼" space at all perimeter walls to allow for expansion and contraction.

Interlocking tiles are intended for dry, loose-laid applications, should never be used as a substitute for permanent flooring in any wet area or be permanently adhered or chemically welded at the joints.

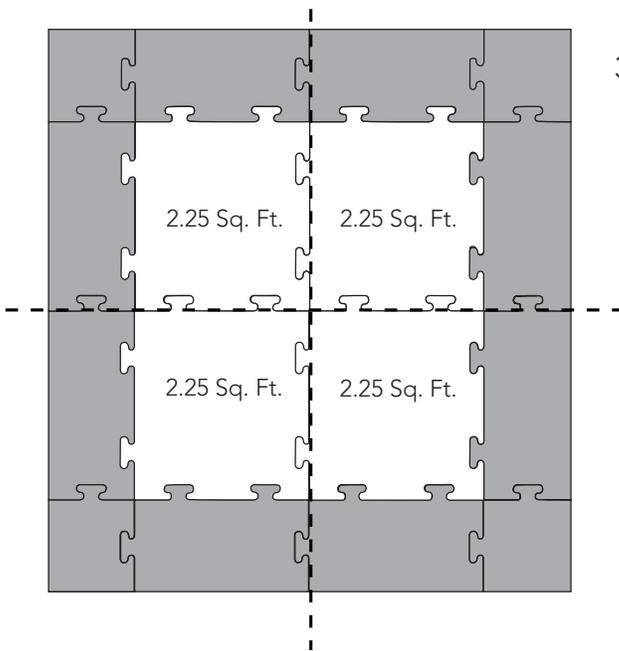

 **Protect-All®**
Flooring
Resilient Vinyl Flooring

For more information give
us a call or visit our website today.

800.544.9538
protect-allflooring.com

Manufactured by Oscoda Plastics® 5585 N. Huron Ave. | Oscoda, MI 48750



Oscoda Plastics is a brand owned by Holcim Solutions and Products US, LLC.
"Protect-All" and "Oscoda Plastics" are registered trademarks owned by Holcim Solutions and Products US, LLC.
OP080013 - ORIG: 12.2.21 REV: 4.23.24